

Bindung Empfänger F-RX36/18/6 mit Sender F-TX1
Bindung Empfänger fortlaufend Kanal 1-97

EMPFÄNGER F-RX6	EMPFÄNGER F-RX18	EMPFÄNGER F-RX36	SENDER F-TX1
6 Zündausgänge	18 Zündausgänge	36 Zündausgänge	99 Kanäle
Nr.	Nr.	Nr.	KANAL
1	1	1	1
2			7
3			13
4	2		19
5			25
6			31
7	3	2	37
8			43
9			49
10	4		55
11			61
12			67
13	5	3	73
14			79
15			85
16	6		91
17			97



EMPFÄNGER F-RX6

KANAL Zündausgang

1	1	Nr.1
2	2	
3	3	
4	4	
5	5	
6	6	

7	1	Nr.2
8	2	
9	3	
10	4	
11	5	
12	6	

13	1	Nr.3
14	2	
15	3	
16	4	
17	5	
18	6	

19	1	Nr.4
20	2	
21	3	
22	4	



EMPFÄNGER F-RX18

KANAL Zündausgang

1	1	Nr.1
2	2	
3	3	
4	4	
5	5	
6	6	
7	7	
8	8	
9	9	
10	10	
11	11	
12	12	
13	13	
14	14	
15	15	
16	16	
17	17	
18	18	


19	1	Nr.2
20	2	
21	3	
22	4	
23	5	
24	6	



EMPFÄNGER F-RX36

KANAL Zündausgang

1	1	Nr.1
2	2	
3	3	
4	4	
5	5	
6	6	
7	7	
8	8	
9	9	
10	10	
11	11	
12	12	
13	13	
14	14	
15	15	
16	16	
17	17	
18	18	
19	19	
20	20	
21	21	
22	22	
23	23	
24	24	
25	25	

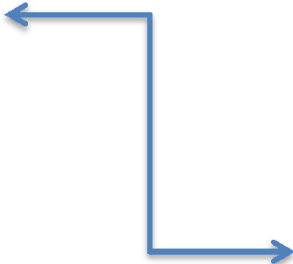

Folgende Anzahl Empfänger können mit dem Sender **F-TX1** auf "C1" **fortlaufend** verbunden werden:

3 Empfänger - F-RX36 = **27** [C1 - C9] gesamt

6 Empfänger - F-RX18 = **54** [C1 - C9] gesamt

17 Empfänger - F-RX6 = **153** [C1 - C9] gesamt

23 5
24 6

25 1 Nr.5
26 2
27 3
28 4
29 5
30 6

31 1 Nr.6
32 2
33 3
34 4
35 5
36 6

37 1 Nr.7
38 2
39 3
40 4
41 5
42 6

43 1 Nr.8
44 2
45 3
46 4
47 5
48 6

49 1 Nr.9

25 7
26 8
27 9
28 10
29 11
30 12
31 13
32 14
33 15
34 16
35 17
36 18

37 1 Nr.3
38 2
39 3
40 4
41 5
42 6
43 7
44 8
45 9
46 10
47 11
48 12
49 13
50 14
51 15
52 16
53 17
54 18

26 26
27 27
28 28
29 29
30 30
31 31
32 32
33 33
34 34
35 35
36 36

37 1 Nr.2
38 2
39 3
40 4
41 5
42 6
43 7
44 8
45 9
46 10
47 11
48 12
49 13
50 14
51 15
52 16
53 17
54 18
55 19
56 20

50	2
51	3
52	4
53	5
54	6

55	<u>1</u> Nr.10
56	2
57	3
58	4
59	5
60	6

61	<u>1</u> Nr.11
62	2
63	3
64	4
65	5
66	6

67	<u>1</u> Nr.12
68	2
69	3
70	4
71	5
72	6

73	<u>1</u> Nr.13
74	2
75	3
76	4
77	5

55	<u>1</u> Nr.4
56	2
57	3
58	4
59	5
60	6
61	7
62	8
63	9
64	10
65	11
66	12
67	13
68	14
69	15
70	16
71	17
72	18

73	<u>1</u> Nr.5
74	2
75	3
76	4
77	5
78	6
79	7
80	8
81	9
82	10
83	11
84	12

57	21
58	22
59	23
60	24
61	25
62	26
63	27
64	28
65	29
66	30
67	31
68	32
69	33
70	34
71	35
72	36

73	<u>1</u> Nr.3
74	2
75	3
76	4
77	5
78	6
79	7
80	8
81	9
82	10
83	11
84	12
85	13
86	14
87	15

78 6

79 1 Nr.14
80 2
81 3
82 4
83 5
84 6

85 1 Nr.15
86 2
87 3
88 4
89 5
90 6

91 1 Nr.16
92 2
93 3
94 4
95 5
96 6

97 1 Nr.17
98 2
99 3
4
5
6

Sender F-TX1 letzter Zündkanal



85 13
86 14
87 15
88 16
89 17
90 18

91 1 Nr.6
92 2
93 3
94 4
95 5
96 6
97 7
98 8
99 9
10
11
12
13
14
15
16
17
18



88 16
89 17
90 18
91 19
92 20
93 21
94 22
95 23
96 24
97 25
98 26
99 27
28
29
30
31
32
33
34
35
36

