

Binding receiver F-RX36/18/6 with transmitter F-TX1

Binding receiver continuing channel 1-97

RECEIVER F-RX6	RECEIVER F-RX18	RECEIVER F-RX36	TRANSMITTER F-TX1
6 ignition outputs	18 Ignition outputs	36 Ignition outputs	99 channels
No.	No.	No.	CHANNEL
1	1	1	1
2			7
3			13
4	2		19
5			25
6			31
7	3	2	37
8			43
9			49
10	4		55
11			61
12			67
13	5	3	73
14			79
15			85
16	6		91
17			97



The following number of receivers can be connected to the transmitter

F-TX1 on "C1" are connected **continuously**:

3 RECEIVER - F-RX36 = 27 [C1 - C9] total

6 RECEIVER - F-RX18 = 54 [C1 - C9] total

17 RECEIVER - F-RX6 = 153 [C1 - C9] total



RECEIVER F-RX6

CHANNEL Ignition output

1 1 No.1

2 2

3 3

4 4

5 5

6 6

7 1 No.2

8 2

9 3

10 4

11 5

12 6

13 1 No.3

14 2

15 3

16 4

17 5

18 6

19 1 No.4

20 2

21 3

22 4



RECEIVER F-RX18

CHANNEL Ignition output

1 1 No.1

2 2

3 3

4 4

5 5

6 6

7 7

8 8

9 9

10 10

11 11

12 12

13 13

14 14

15 15

16 16

17 17

18 18

19 1 No.2

20 2

21 3

22 4

23 5

24 6



RECEIVER F-RX36

CHANNEL Ignition output

1 1 No.1

2 2

3 3

4 4

5 5

6 6

7 7

8 8

9 9

10 10

11 11

12 12

13 13

14 14

15 15

16 16

17 17

18 18

19 19

20 20

21 21

22 22

23 23

24 24

25 25

23	5
24	6

25	<u>1</u>	No.5
26	2	
27	3	
28	4	
29	5	
30	6	

31	<u>1</u>	No.6
32	2	
33	3	
34	4	
35	5	
36	6	

37	<u>1</u>	No.7
38	2	
39	3	
40	4	
41	5	
42	6	

43	<u>1</u>	No.8
44	2	
45	3	
46	4	
47	5	
48	6	

49	<u>1</u>	No.9
----	----------	------

25	7
26	8
27	9
28	10
29	11
30	12
31	13
32	14
33	15
34	16
35	17
36	18

37	<u>1</u>	No.3
38	2	
39	3	
40	4	
41	5	
42	6	
43	7	
44	8	
45	9	
46	10	
47	11	
48	12	
49	13	
50	14	
51	15	
52	16	
53	17	
54	18	

26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36

37	<u>1</u>	No.2
38	2	
39	3	
40	4	
41	5	
42	6	
43	7	
44	8	
45	9	
46	10	
47	11	
48	12	
49	13	
50	14	
51	15	
52	16	
53	17	
54	18	
55	19	
56	20	

50	2
51	3
52	4
53	5
54	6

55	1	No.10
56	2	
57	3	
58	4	
59	5	
60	6	

61	1	No.11
62	2	
63	3	
64	4	
65	5	
66	6	

67	1	No.12
68	2	
69	3	
70	4	
71	5	
72	6	

73	1	No.13
74	2	
75	3	
76	4	
77	5	

55	1	No.4
56	2	
57	3	
58	4	
59	5	
60	6	
61	7	
62	8	
63	9	
64	10	
65	11	
66	12	
67	13	
68	14	
69	15	
70	16	
71	17	
72	18	

73	1	No.5
74	2	
75	3	
76	4	
77	5	
78	6	
79	7	
80	8	
81	9	
82	10	
83	11	
84	12	

57	21
58	22
59	23
60	24
61	25
62	26
63	27
64	28
65	29
66	30
67	31
68	32
69	33
70	34
71	35
72	36

73	1	No.3
74	2	
75	3	
76	4	
77	5	
78	6	
79	7	
80	8	
81	9	
82	10	
83	11	
84	12	
85	13	
86	14	
87	15	

Transmitter F-TX1 last ignition channel

78 6

79 1 No.14
80 2
81 3
82 4
83 5
84 6

85 1 No.15
86 2
87 3
88 4
89 5
90 6

91 1 No.16
92 2
93 3
94 4
95 5
96 6

97 1 No.17
98 2
99 3
4
5
6

85 13
86 14
87 15
88 16
89 17
90 18

91 1 No.6
92 2
93 3
94 4
95 5
96 6
97 7
98 8
99 9
10
11
12
13
14
15
16
17
18

88 16
89 17
90 18
91 19
92 20
93 21
94 22
95 23
96 24
97 25
98 26
99 27
28
29
30
31
32
33
34
35
36